


ADD A SHOWER™

ASSEMBLY INSTRUCTIONS

WITHOUT FAUCET & RISER

#0517601

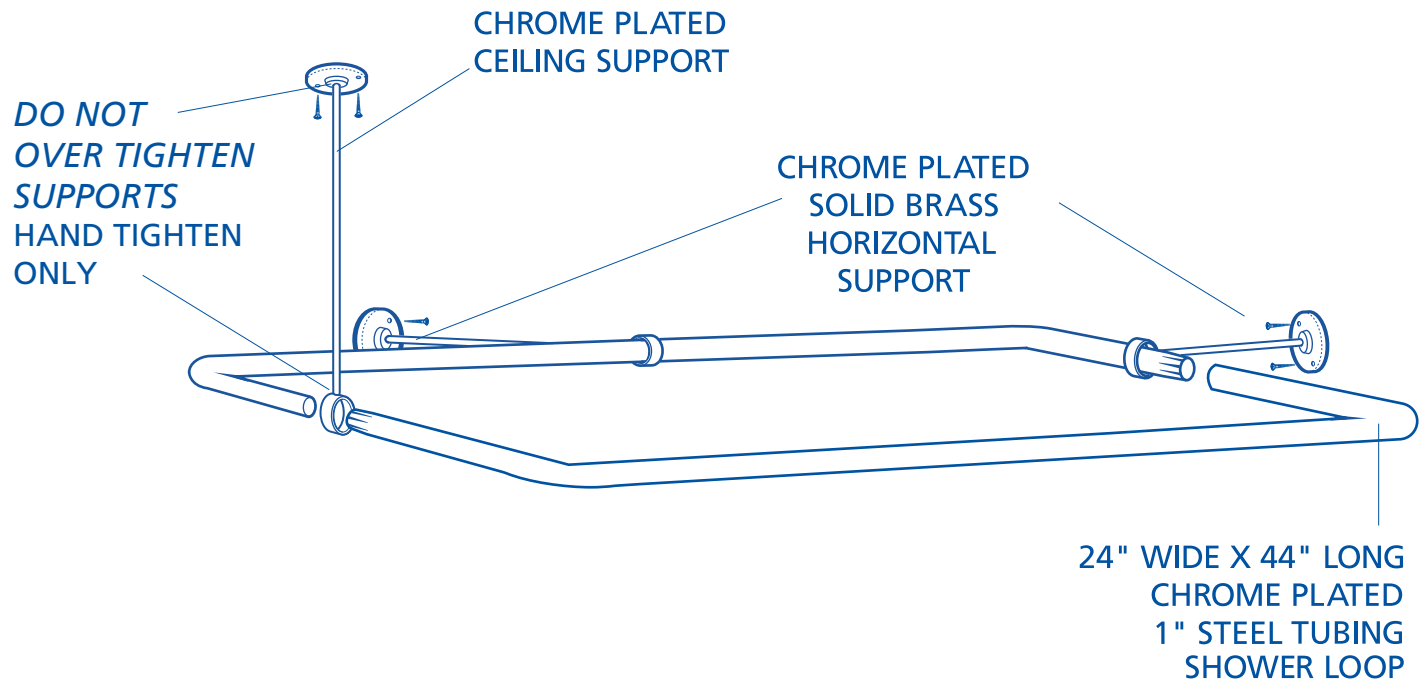

PARTS LIST

- 2 - frames (tapered at one end)
- 2 - 10" wall support (2 included)
- 1 - 18" ceiling support
- 1 - hardware kit (screws and plugs)

READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.

TOOLS REQUIRED

Large flat head screwdriver, Phillips head screw driver, drill, hammer.

To assemble the loop, fit tapered ends opposite to each other. Fit wall and ceiling supports over loop and tighten at joints (with ceiling support horizontal and wall support vertical).

Check all parts against this parts list to insure that all parts are present. We recommend two people for this assembly.



WATERLINE PRODUCTS CO.LTD.

5159 Bradco Boulevard, Mississauga, Ontario, Canada L4W 2A6

Tel 905 625-9440 Fax 905 625-9481 Toll Free 1-800-361-3773

www.waterlineproducts.com Email sales@waterlineproducts.com