


# ADD A SHOWER™

## ASSEMBLY INSTRUCTIONS

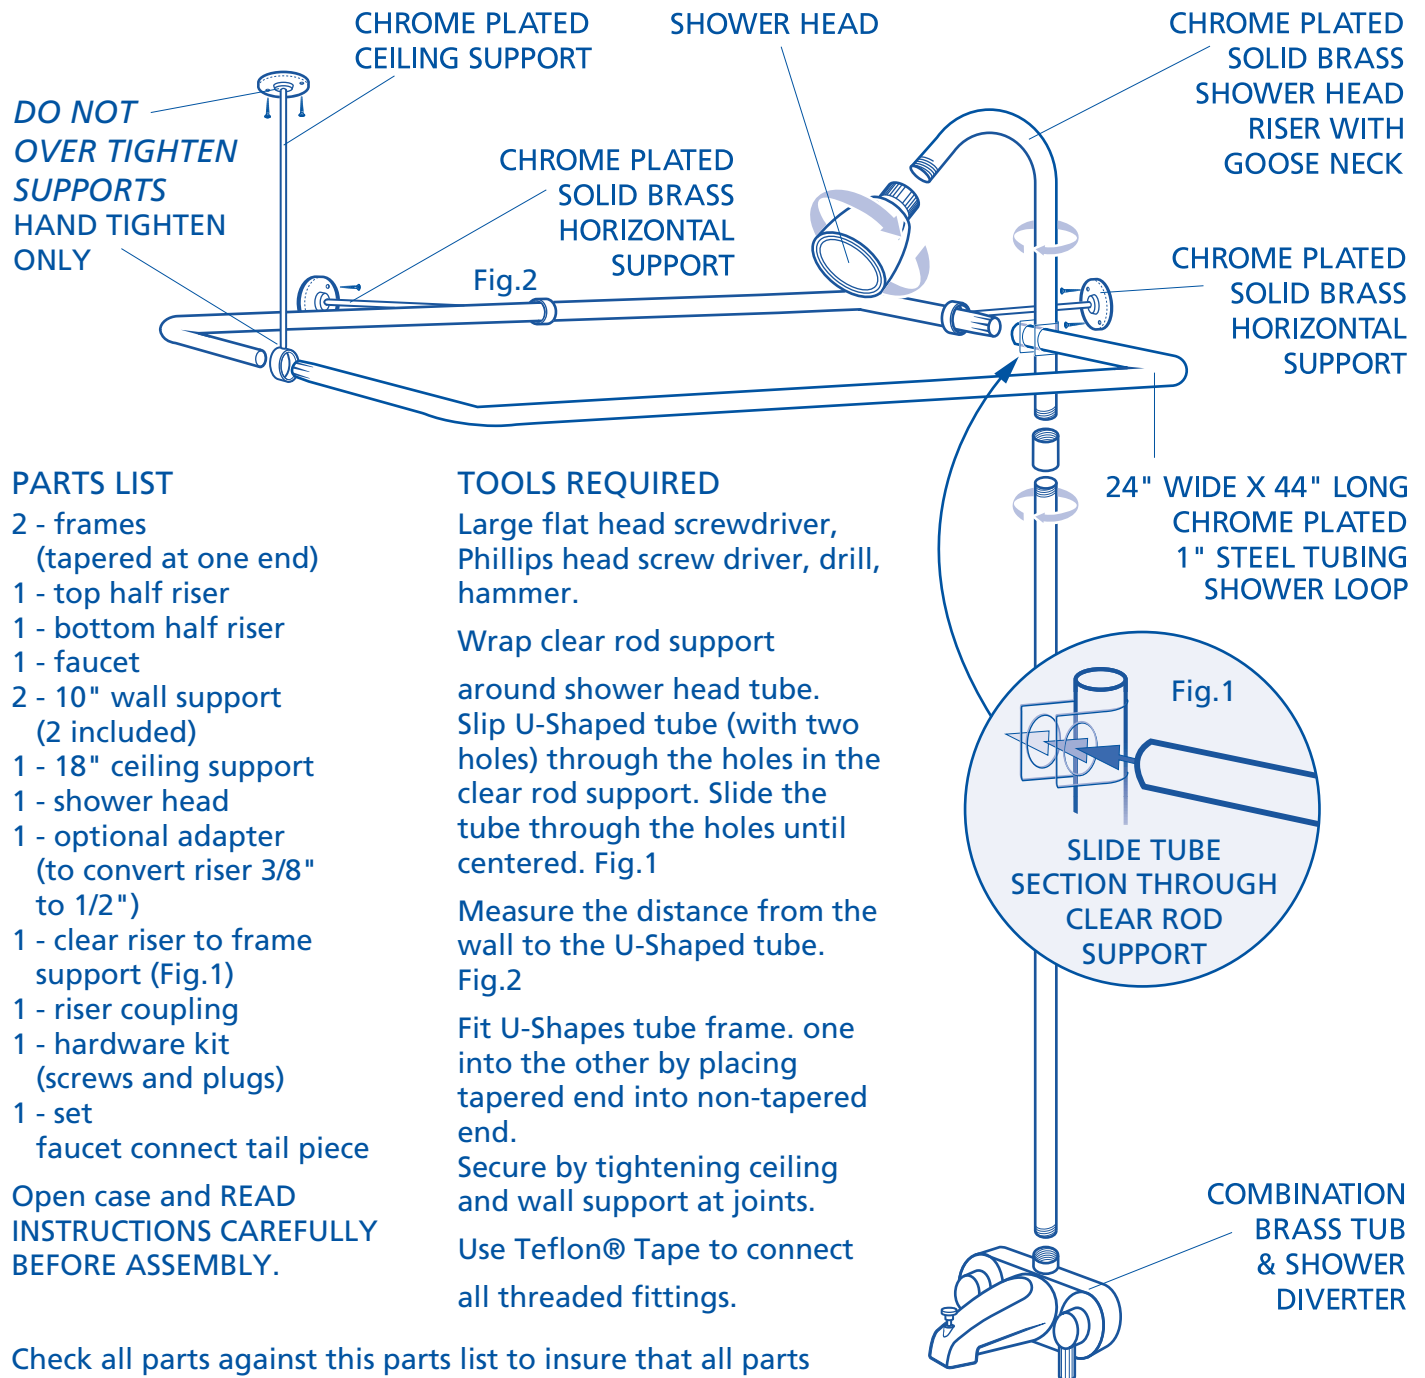

### PARTS LIST

- 2 - frames (tapered at one end)
- 1 - top half riser
- 1 - bottom half riser
- 1 - faucet
- 2 - 10" wall support (2 included)
- 1 - 18" ceiling support
- 1 - shower head
- 1 - optional adapter (to convert riser 3/8" to 1/2")
- 1 - clear riser to frame support (Fig.1)
- 1 - riser coupling
- 1 - hardware kit (screws and plugs)
- 1 - set faucet connect tail piece

Open case and READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.

### TOOLS REQUIRED

Large flat head screwdriver, Phillips head screw driver, drill, hammer.

Wrap clear rod support around shower head tube. Slip U-Shaped tube (with two holes) through the holes in the clear rod support. Slide the tube through the holes until centered. Fig.1

Measure the distance from the wall to the U-Shaped tube. Fig.2

Fit U-Shapes tube frame. one into the other by placing tapered end into non-tapered end.

Secure by tightening ceiling and wall support at joints.

Use Teflon® Tape to connect all threaded fittings.

Check all parts against this parts list to insure that all parts are present.

We recommend two people for this assembly.



**WATERLINE PRODUCTS CO.LTD.**

5159 Bradco Boulevard, Mississauga, Ontario, Canada L4W 2A6

Tel 905 625-9440 Fax 905 625-9481 Toll Free 1-800-361-3773

www.waterlineproducts.com Email sales@waterlineproducts.com